


# FENCE ALERT™

## OPERATING INSTRUCTIONS

- Switch on to preferred trigger level 1 (low) or 2 (high).
- Clip onto fence wire or tape.
- Flashing light indicates low fence voltage.

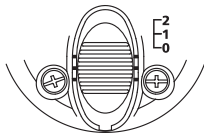

 
## NOTES

- Actual voltage at which trigger operates may vary slightly depending on fence construction.
- To test the Fence Alert, unclip from fence or turn the energizer off. The Fence Alert should flash within 10 seconds. If the light is dim or does not flash, then replace the battery with a CR2032 lithium button cell.
- Fence Alert works with all pulsed energizers.
- In cases of low voltage, use a Fault Finder or Digital Voltmeter to help locate faults.



## WARRANTY

- 12 month warranty with Proof of Purchase.  
This warranty does not impair your statutory rights.



Proudly designed by Tru-Test Group, New Zealand. For information about Tru-Test Group or our brands visit [www.tru-test.com](http://www.tru-test.com).